
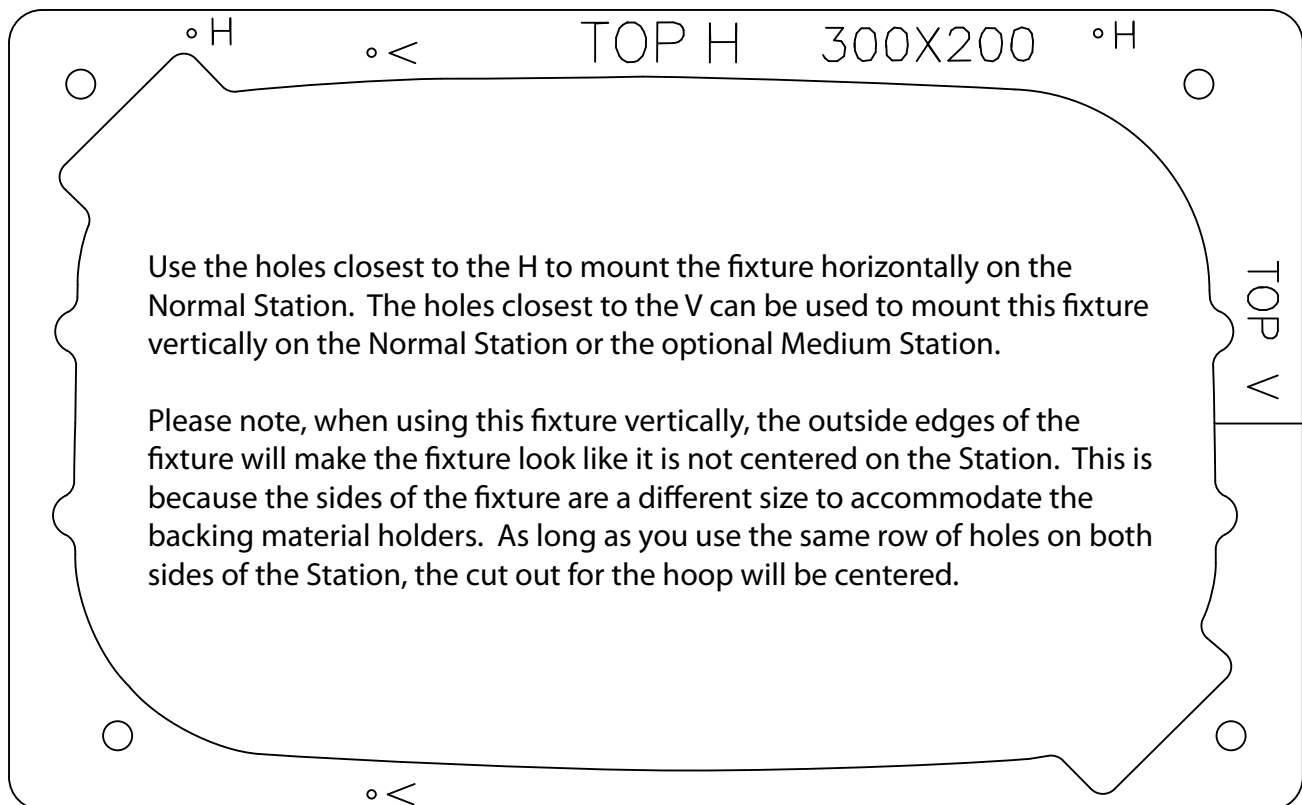


180x130 and 200x300 Mounting Instructions

The 180x130 and 200x300 use thumb screws for mounting. This is done to allow for multiple mounting choices. See the notes below for the correct mounting holes to use. Then simply thread the thumb screws into the holes in the Station. There are no nuts to use. If you ever loose your thumb screws, you can purchase standard 6-32 x 5/8 inch screws at a local hardware store.

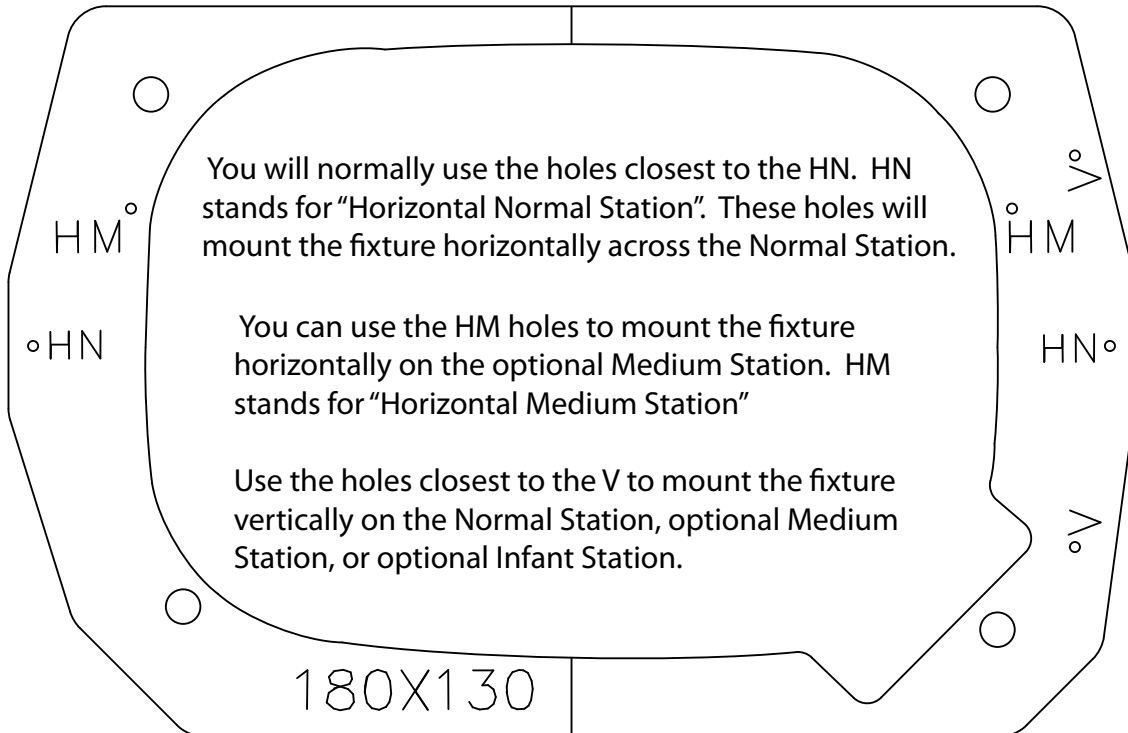

If you have any questions please give us a call.
Midwest Products Inc. www.hoopmaster.com
262-257-0930 or 1-800-900-0741

Brother 60x40 Hoop Fixture

The 60x40 fixture is used directly on the portable mounting base. Place the pins in the holes in the portable base to lock it in place. This fixture can also be used on your station just like the other fixtures. This fixture is designed mainly for embroidering on very small items.

